Remote Control Guide



TV, AUD, DVD, VCR, STB

Use one remote to control multiple devices.

SETUP

Use for programming sequences of devices controlled by the remote.

Skip backwards 10 seconds while watching a recording or while watching live TV.

REWIND

Rewind through parts of a recording.

Press to watch a recording or control another device

Press to stop watching a recording or to stop a recording that is in progress.

Displays applications including the configuration menu.

GUIDE

Opens the Interactive Program Guide.

DAY+/-

Jump one day ahead or back in the Interactive Program Guide.

RED, GREEN, YELLOW, BLUE

Access additional features on your set-top box.

VOL +/-

Raise or lower the volume.

MUTE

Turn the sound off or on.

NUMBER KEYS (0-9)

Directly select a channel.

In TV control mode, would change the input of the device you are controlling.



OK

ON DEMAND

FAV

2

5

8 tuv

ikl

LAST

3 de

CH+

VOL

MUTE

4

ghi

7 pgrs

POWER

Turn on/off a selected device.

Return to watching live TV.

Displays a list of recorded shows on your PVR/DVR set-top box

SKIP FORWARD

Skip forward 30 seconds while watching a recording.

FAST FORWARD

Fast forward through parts of a recording.

RECORD

Press to record a show.

Display the current channel and program information. Press again for more detail.

Pause what you are currently watching.

ARROW KEYS/OK

Navigate onscreen choices.

Exit the current screen.

PAGE+/-

Page up or down in menu screens and Interactive Program Guide.

CHANNEL +/-

Changes to the next higher or lower channel.

Recall the last channel you were watching.

ON DEMAND*

Access video on demand services.

View your favorite channels.

*If available.



Support (888) 508-2WIN