Programming Remote For Your TV





Western lowa

- 1. Make sure the TV is on.
- **2.** Press **TV**, it will blink once.
- **3.** Press and hold **SETUP**, the TV key will blink twice.
- **4.** Press **9-9-1**, the TV key will blink once.
- 5. Press and release the CH+ key continuously, then stop when the TV turns off.
- **6.** Press **SETUP** to save code.

Support (888) 508-2WIN

www.westianet.com